



advance

DA-LITE


Made In The U.S.A.

DA-LITE SCREEN COMPANY, INC.

3100 North Detroit Street
Post Office Box 137
Warsaw, IN 46581-0137
Phone: 574-267-8101
800-622-3737
Fax: 574-267-7804
877-325-4832
www.da-lite.com
info@da-lite.com

Ceiling Projector Mount Plenum Cover CPM-PLC

Form E-436
Rev. 08 / 10

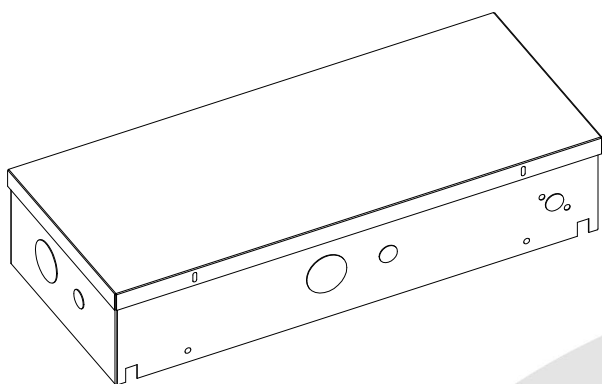



Caution: This product is designed for ceiling installation only. Qualified personnel using the appropriate fasteners should mount the Plenum Cover. The surface to which this unit is mounted must be capable of supporting a static load of four times the combined weight of the projector and mount. Do not attach to plaster or drywall alone.

Required Tools:

- 7/16" wrench
- Phillips screwdriver

Procedure


1. Remove contents from carton and examine for damaged or missing parts.

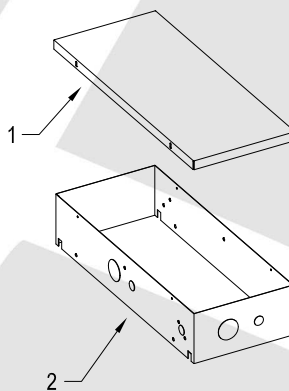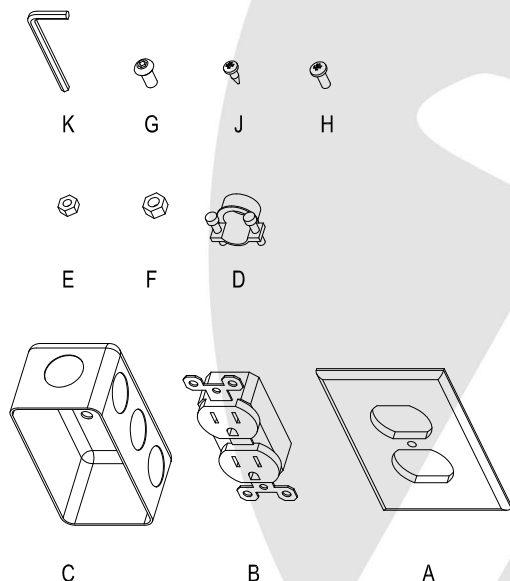

ITEM	DESCRIPTION	QTY
1	PLENUM COVER TOP	1
2	PLENUM COVER	1
	PACKAGE SET	1
A	DUPLEX COVER	1
B	DUPLEX RECEPTACLE	1
C	JUNCTION BOX	1
D	STRAIN RELIEF	1
E	NUT, HEX 10-24 KEPS	2
F	NUT, HEX 1/4"-20 KEPS	4
G	SCREW, BHSCS 1/4"-20 X 1/2"	4
H	SCREW, MACH 10-24 X 1/2"	2
J	SCREW, SMS #8 X 1/2"	4
K	WRENCH, ALLEN 5/32"	1


2. Follow the installation instructions of the CPM-ACP.
3. After securing the CPM-ACP, perform the electrical wiring internal to the Plenum Cover.
4. (Optional) Assemble Junction Box to the inside of the Plenum Cover in one of two possible locations. See Figure 1.

Figure 1

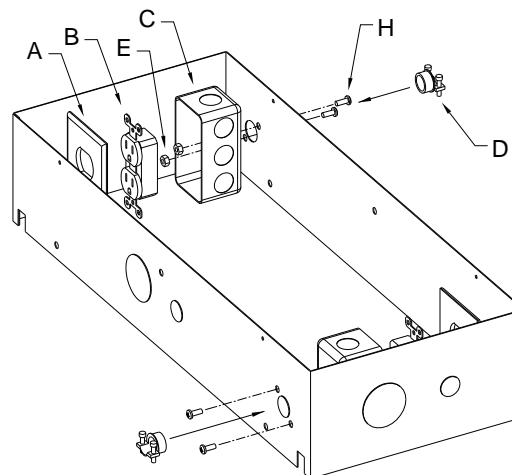


5. Place the Plenum Cover inside of the CPM-ACP. See Figure 2.

Figure 2

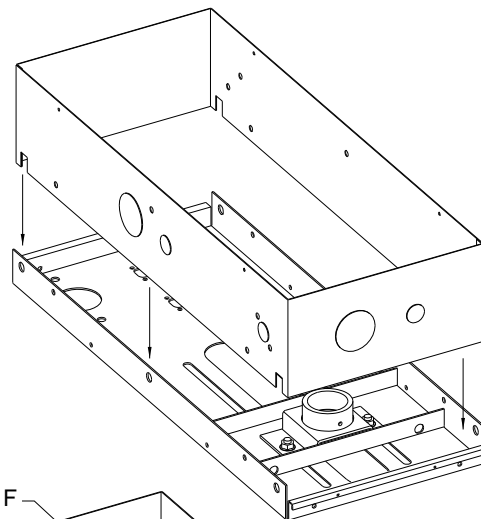

6. Attach the Plenum Cover to the CPM-ACP. See Figure 3.

Figure 3

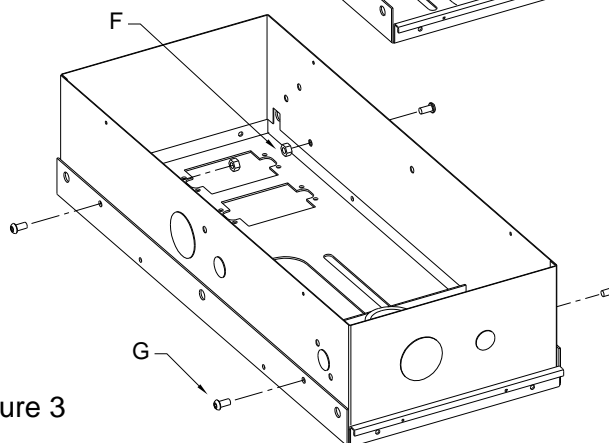

7. Finish the electrical wiring.
8. Attach the Top to the Plenum Cover. See Figure 4

Figure 4

